



Programming

The *Culligan* AccuSoft® circuit board controls all of the filter functions. These settings are programmed at the time of installation. The following is a list of all the microprocessor functions, in the event that any of the settings need to be adjusted. If a small padlock icon appears in the lower right corner of the display, the microprocessor settings are locked and only the Time-of-Day setting can be adjusted, call your Culligan Dealer if setting changes are required.

1. With a flashing or blank display, pressing the status button twice will move to the **Time-of-Day** adjustment. A number “1” will appear at the bottom of the display while in this mode.
2. Press status again, this displays the **Time-of-Regeneration**. A number “2” will appear at the bottom of the display while in this mode.
3. Press status again, the number at the bottom of the display will skip to “4”. **This setting is not used.**
4. Press status again, this displays the **Backwash Time**. The setting can be adjusted between 5 and 40 minutes. A number “5” will appear at the bottom of the display while in this mode.
5. Press status again to display the **Pause Time**. This setting can be adjusted from 1-15 minutes. A number “6” will appear at the bottom of the display while in this mode.
6. Press status again to display the **Fast Rinse Time**. This setting can be adjusted from 5-30 minutes. A number “7” will appear at the bottom of the display while in this mode.



Press ▲ to increase or
▼ to decrease



Press ▲ to increase or
▼ to decrease



Press ▲ to increase or
▼ to decrease



Press ▲ to increase or
▼ to decrease



Press ▲ to increase or
▼ to decrease



7. Press status again will show the **Regeneration Interval**. This setting can be adjusted from 1-42 days. A number “8” will appear at the bottom of the display while in this mode.



Press ▲ to increase or
▼ to decrease

8. Press status again, the number “9” will appear at the bottom of the display. **This setting is not used.**



9. Pressing status again brings up the ability to **Enable/Disable** the screen blanking. To have the display constantly lit, press the up arrow, a “d” for disable will appear in the display. Pressing the up arrow again displays an “E”, signifying that display blanking is enabled. A number “10” will appear at the bottom of the display while in this mode.



Press ▲ to change