

The Culligan® AccuSoft® circuit board controls all of the softener functions. These settings are programmed at the time of installation. The following is a list of all the microprocessor functions, in the event that any of the settings need to be adjusted. If a small padlock icon appears in the lower right corner of the display, the microprocessor settings are locked and only the Time-of-Day setting can be adjusted, call your Culligan Dealer if setting changes are required.

 
1. With a flashing or blank display, pressing the status button twice will move to the **Time-of-Day** adjustment. A number “1” will appear at the bottom of the display while in this mode.



2. Press status again, this displays the **Time-of-Regeneration**. A number “2” will appear at the bottom of the display while in this mode.



3. Press status again, the number “3” will appear at the bottom of the display. **This setting is not used.**



4. Pressing status again will show the **Salt Dosage**. This can be adjusted from 3-15 lbs. for the 9” and 5-24 lbs. on 12” models. A number “4” will appear at the bottom of the display while in this mode.



5. Press status again, this displays the **Backwash Time**. The setting can be adjusted between 5 and 40 minutes. A number “5” will appear at the bottom of the display while in this mode.



6. Press status again to display the **Brine/Rinse Time**. The settings can be adjusted from 37-85 min for 9”, and 35-89 min for 12”. A number “6” will appear at the bottom of the display while in this mode.



7. Press status again to display the **Hardness Level**. The setting can be adjusted from 2-99 gpg. **Meter Models Only.** A number “7” will appear at the bottom of the display while in this mode.



8. Press status again, for time clock models the display will show the **Regeneration Interval**. Controls with a Soft-Minder® meter will display the **Gallons to Signal** (multiply the displayed value by 10). A number “8” will appear at the bottom of the display while in this mode.



9. Press status again, the number “9” will appear at the bottom of the display. **This setting is not used.**



10. Pressing status again brings up the ability to **Enable/Disable** the screen blanking. To have the display constantly lit, press the up arrow, a “d” for disable will appear in the display. Pressing the up arrow again displays an “E”, signifying that display blanking is enabled. A number “10” will appear at the bottom of the display while in this mode.